
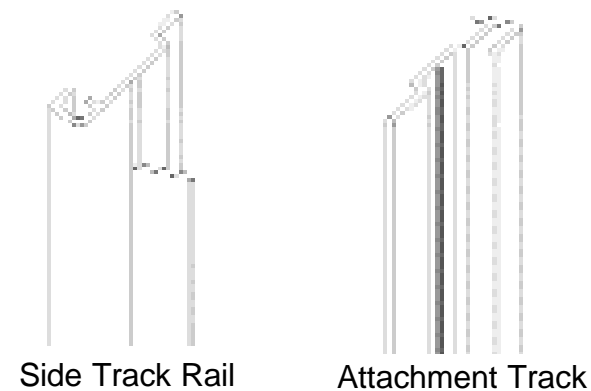
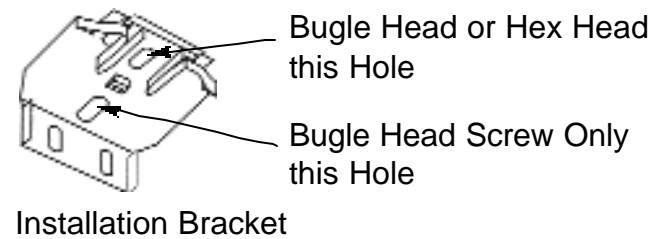


BASICS

A few simple tools are required:

- Measuring tape
- Power drill, drill bits
- Hex head and/or Phillips driver bit
- Pencil

Additional fasteners other than those sent with your shade may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.




1 SIDE TRACK INSTALLATION

The minimum required depth for installation is 1 1/2". The minimum depth required for Flush mount installation is 1 7/8".

Mark the desired location for the side track. On a shallow mount, align the front edge of the Attachment Track to the front of the window frame. For a Flush mount, the front edge of the Attachment Track should be placed 3/8" back from the front of the window frame. The track may be recessed further, but keep in mind that there must be a minimum of 1/4" between the back of the Attachment Track and any obstruction.


Peel the paper liner from the back of the Attachment Track to expose the adhesive. Attach the Attachment Track to the window frame. Secure the track in place by installing a screw along the etched center line every 18".

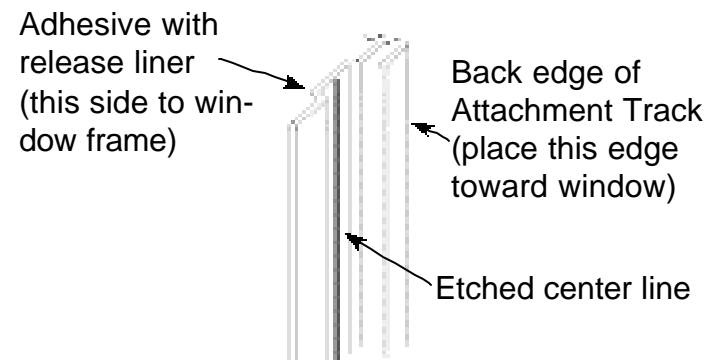


2 BRACKET INSTALLATION

Shades are shipped with the required number of brackets for proper installation. End brackets should be located with centerlines 2 1/2" in from each end. Depending on the width of the shade, additional brackets may be necessary evenly spaced between the two end brackets.

For shade widths of:	Use this Number of brackets:
Up to 40"	2
40" - 72"	3
72" - 84"	4
84" and up	5

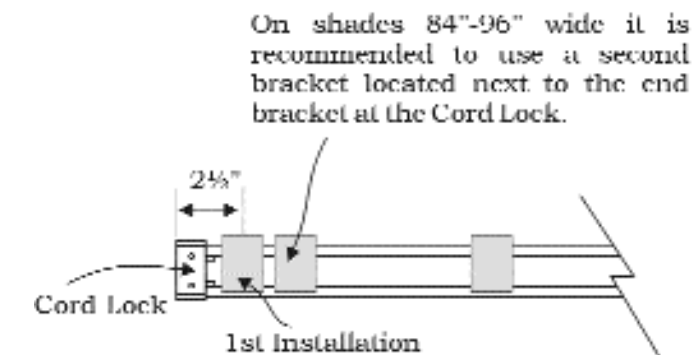


IMPORTANT: Brackets must be installed so that the front screw hole is in line with the etched center line on the Attachment Track.

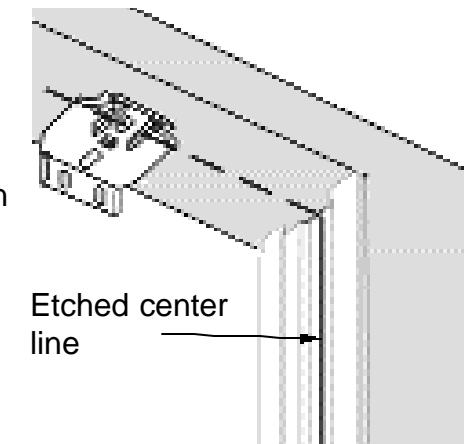


3 SHADE INSTALLATION

Select the Side Track Rail that will be installed on the opposite side of the control cords. The notch on the Track must be on the top. Snap the Side Track Rail into the Attachment Track (the second Side Track Rail will be installed in a later step).

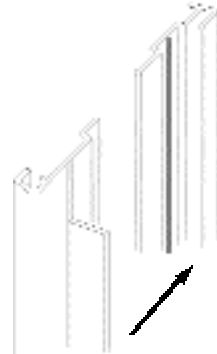

Unwind the cord from the shade. Bring the shade up near the installation brackets. Slide the non-control end of the shade over the Side Track Rail. Let the non-control end of the headrail rest on the Side Track Rail.

While holding the opposite end of the shade, slide the T of the second Side Track Rail into the notch on the end of the shade.

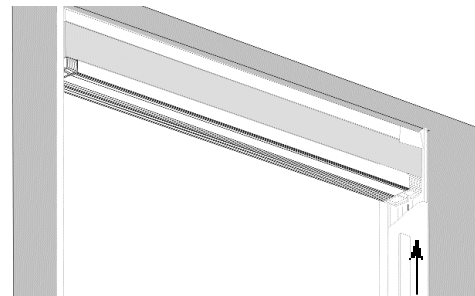

Snap the top of the Side Track Rail in place.

Insert the front clip of the installation bracket into the front groove of the rail.


Push the rail back and up until the back clips of the bracket are inserted in the back groove of the rail.



Snap the rest of the Side Track Rail in place.

CORDLOCK OPERATION

To lower or release shade, pull the cord inward toward the center of the shade.

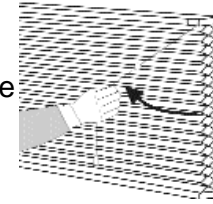

To raise or lock the shade, pull the cord straight down and outward toward the edge of the shade.

PROTECT YOUR CHILDREN

Be aware that it is possible for children to strangle in window covering cords. To reduce the occurrence of accident, all cords must be kept out of the reach of children, including infants. Cord cleats are an effective way to implement this essential precaution.

Mount the cord cleat at a safe height, taking into account furniture or other objects upon which a child may climb. Then, after each use of the shade, simply wrap the excess cord around the cleat. It's fast, easy and safe.



CLEANING AND CARE

The Shade fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the shade can be removed from the Installation brackets and soaked in warm water. When damp, raise shade tightly to re-crisp pleats.

Due to the superior insulation properties of this window treatment, it is sometimes possible for condensation to build up between the window and the shade. This happens most frequently when the window is old or not sealed properly. If condensation does occur, simply let your window breathe by occasionally raising the shade.



ComforTrack™ Energy Saving Side Track System

Installation Instructions

Our window fashions represent a design breakthrough in style, efficiency and function. Our Cellular shades feature 100% non-woven polyester fabric providing a soft diffused light and high level of privacy. The unique hardware system is designed to provide years of reliable service when properly installed.

Please take a few minutes to read through these instructions before beginning.